

ice the bass control
You cannot combine
with **w00x**

is **GAMESOUND** once

FAST, **PUNCH**,

available when you

control to interrupt
y.
out sound and the

ction you can:

;

on, then press
elect **TUNER** (or press
control).
briefly followed by
d preset station

ice or more to select
he remote control)

in tune to your
matic search tuning:
or **▶▶** on the remote
when the frequency in

unes to a station of
lay shows **SEARCH**

until you find the

ress **◀◀** or **▶▶** (**◀◀** or
riefly and repeatedly

DIGITAL TUNER

until you have found optimal reception.

To improve radio reception:

- For **FM**, extend, incline and turn the telescopic antenna. Reduce its length if the signal is too strong.
- For **AM**, the set uses a built-in antenna. Direct this antenna by turning the whole set.

Programming tuner stations:

You can store up to a total of 30 radio stations in the memory, manually or automatically (Autostore).

Autostore

Automatic programming will start from preset 1. The set will only program stations which are not in the memory already.

1. Press **ALBUM / PRESET-** or **+** once or more to select the preset number.
2. Press **PROG** for 4 seconds or more to activate auto store programming.
→ Display: **AUTOSTORE** is shown and available stations are programmed in order of waveband **FM**, followed by **AM**, preset 1 station will then be played after all stations are stored automatically.

Manual programming

1. Tune to your desired station (see **Tuning to stations**).

2. Press **PROG** to activate programming.
→ Display: **program** flashes.

3. Press **ALBUM / PRESET-** or **+** once or more to allocate a number from 1 to 30 to this station.


4. Press **PROG** again to confirm.
→ Display shows the preset number, waveband and the frequency of the preset station.

5. Repeat the above four steps to store other stations.

Note : You can erase a preset station by storing another frequency in its place.

To listen to a preset station

Press **ALBUM / PRESET-** or **+** once or more until the desired preset station is displayed.

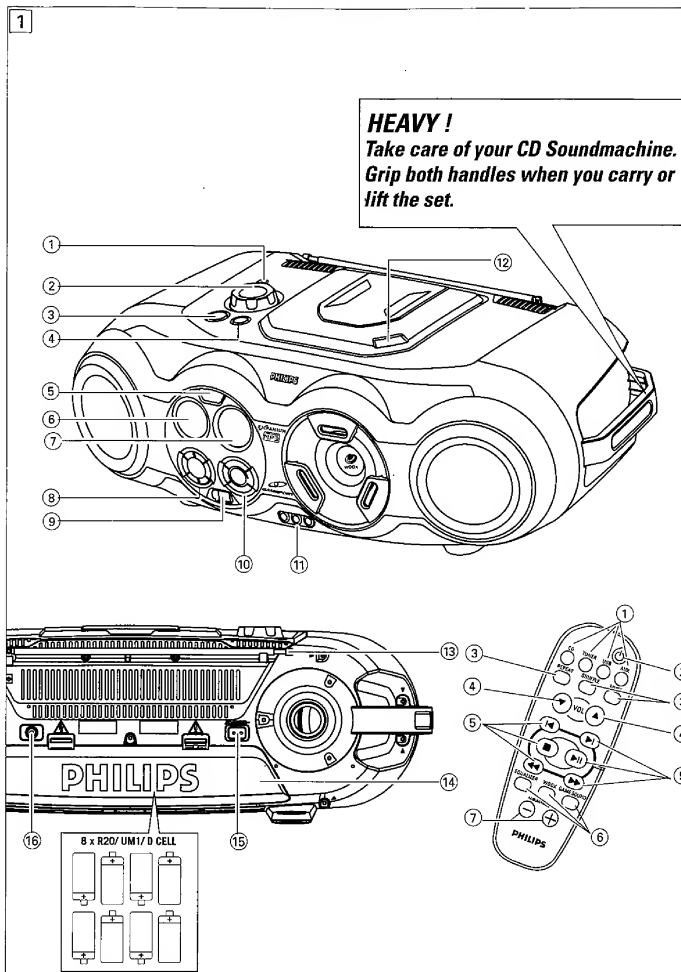

AYER

select and store your
ice. If you like, store
20 tracks can be

the set to select your
remote control **◀** or

- or **+** once or more to
ARCH **◀◀** or **▶▶** (on the

the selected track
rs briefly.

BACK if no track
ing.
and store all desired

try to program more

sc program, press **▶▶**.

you can press **PROG**

GAMESOUND / USB PC LINK

GAMESOUND (See 8)

PLAYING WITH GAMESOUND:

1. Press **SOURCE** once or more on the set to select the **GAME=AUX** function (**AUX** on the remote control)
→ Display scrolls: **GAME PORT**

2. Connect your console to the cinches on the front of the set **AUDIO IN (LEFT / RIGHT)** and **VIDEO IN**.

3. Press **GAMESOUND** once or more to select your game sound option.
→ Display briefly shows **BLAST**, **PUNCH**, **SPEED** or **NORMAL**.

Connecting other equipment to your system


Use the supplied video cable to connect the **VIDEO OUT** terminal on the back of the set to **VIDEO IN** on a TV or VCR for viewing or recording.

USB PC LINK

Quick Setup Guide

PC system requirements

- USB port with Windows 98 SE / ME / 2000 / XP
- Intel Pentium MMX200 or higher

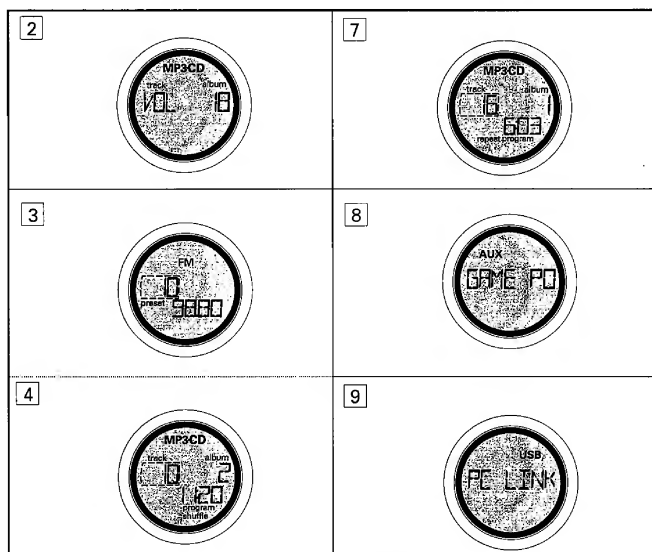

o tracks programmed.

y, and program

source


USB port on your computer. (See [B])

2. Press **SOURCE (USB)** on the remote control once or more to select **USB PC LINK**.

3. Turn on your PC then insert the supplied USB PC LINK installer disc in the PC's CD-ROM drive. This application software can also be downloaded from <http://www.audio.philips.com>.

IMPORTANT!

Please use this customized MusicMatch software for your USB PC Link application. Remember to un-install all other MusicMatch jukebox software first from your PC system (if available).

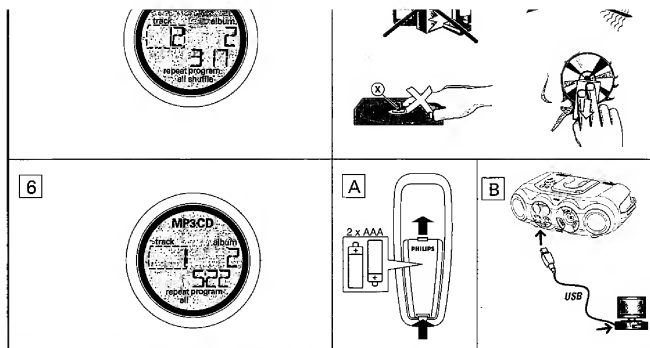

TING

the points listed below before taking the set for repair. If you are unable following these hints, consult your dealer or service center.

Do not open the set as there is a risk of electric shock! Under no circumstances try to repair the set yourself, as this will invalidate the warranty.

ected properly

erted thy

e set

ference inserted, remove batteries it. Press and hold onds, then re-plug / y activating the set again. check that your PC's t to minimum. PC's CD-ROM drive, refer igital CD audio output.

is once or more to skip to of the data file

IE-AUX mode or on your game console

o close to TV, VCR or distance

inction properly

erted thy

et too large

M telescopic aerial

NO DISC indication

- CD-R(W) is blank/ not finalized
- Use an unfinalized CD-R(W)

INSERT DISC/CHECK DISC/DISC ERROR indication

- No CD inserted
- Inserted a suitable disc
- CD badly scratched or dirty
- Replace/ clean CD, see Maintenance
- Laser lens steamed up
- Wait until lens has cleared

The CD skips tracks

- CD damaged or dirty
- Replace or clean CD
- shuffle or program is active
- Switch off shuffle / program

NO CONNECTION is displayed in USB PC LINK mode for more than 10 seconds

- Check the connection between your PC and the set. If necessary, please refer to the chapter **Connecting to USB PC Link** for the initial setup required.
- Make sure the connected PC is turned on and the MusicMatch software is working.

Sound skips during MP3 playback

- MP3 file made at compression level exceeding 320kbps
- Use a lower compression level to record CD tracks into MP3 format
- Disc damaged or dirty
- Replace or clean disc

Cannot find desired MP3 title

- Wrong file extension used and/ or file name with unsuitable text characters used
- Make sure the file names are typed in English text characters and that the MP3 files end with .mp3

English

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Environmental information

We have done our best to reduce the packaging and make it easy to separate into 3 materials: cardboard, expandable polystyrene, polyethylene.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, exhausted batteries and old equipment.

Philips AZ2558



Tested To Comply
With FCC Standards

FOR HOME OR OFFICE USE

Philips Consumer Electronics North America
One Philips Drive
Knoxville TN 37914
Phone: 1-800-531-0039

4 Para desconectar el aparato d de pared.

3 Conecte el cable de alimentac tra local.

2 Si su aparato está equipado c vendido o al centro de servic eléctrica local. En caso contra la base del aparato corresp

la reproducción de MP3-CD / CD / USB PC LINK:

- borra un programa de MP3-CD / CD
- inicia o hace una pausa en la reproducción de MP3-CD / CD / USB PC LINK.
- para buscar hacia atrás/adelante en una pista del MP3-CD / CD.

TUNER - sintoniza emisoras de radio

WOX - activa/desactiva la intensificación especial en la respuesta de bajos.

EQUALIZER - selecciona las frecuencias de bajos.

medios, agudos.

MP3-CD / CD - para programar pistas y repasar el programa.

TUNER - para programar emisoras de radio

ACCESORIOS INCLUIDO

- control remoto
- cable de USB
- cable de vídeo
- instalador CD-ROM USB PC LINK
- cable de alimentación

PANELES SUPERIOR Y DELANTERO (Véase [1])

— para programar emisoras de radio de 3 a 5 mHz

Spanish

indmachine

AZ 2558

Need help? Call us!

Philips representatives are ready to help you with any questions about your new product. We can guide you through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!

CALL US BEFORE YOU CONSIDER RETURNING THE PRODUCT!

1-800-531-0039

or

Visit us on the web at www.philips.com



 
PHILIPS

CONSUMER ELECTRONICS NORTH AMERICA

Knoxville, Tennessee 37914-1810, U.S.A.

Meet Philips at the Internet

<http://www.philips.com>



AZ 2558

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these *safety* symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

PIAC5097

Renvoyez votre carte d'enregistrement de garantie pour vous assurer de recevoir tous les avantages auxquels vous avez droit.

- Dès que l'achat de votre appareil Philips est enregistré, vous avez droit à tous les avantages dont bénéficient les possesseurs des produits Philips.
- Remplissez et renvoyez votre carte d'enregistrement de garantie jointe à votre appareil sans tarder et vous bénéficierez de ces avantages importants.

Vérification de garantie

Enregistrez votre produit dans les 10 jours pour confirmer votre droit à une protection maximum selon les termes et les conditions de votre garantie Philips.

Confirmation de possession

Votre carte d'enregistrement de garantie prouve que vous possédez l'appareil en cas de vol ou de perte du produit.

Enregistrement du modèle

Renvoyez votre carte d'enregistrement de garantie dès aujourd'hui pour vous assurer de recevoir toutes les informations, les offres et les bonus auxquels vous avez droit en tant que possesseur de ce modèle.


Connaissez ces

symboles de *sécurité*

Cet espace vous est réservé

Inscrivez ci-dessous le numéro de série situé à l'arrière du bloc. Conservez cette informa-

AZ 2558

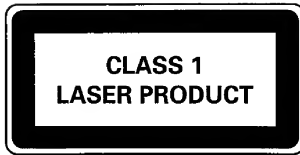

3140 115 3102.1

Printed in China

apparatus does not exceed the Class B limits for radio noise
ai apparatus as set out in the Radio Interference Regulations of the
ent of Communications.

reil numérique n'émet pas de bruits radioélectriques dépassant les
ux appareils numériques de Classe B prescrites dans le Règlement sur
lectrique édicté par le Ministère des Communications du Canada.

with the FCC-Rules, Part 15 and with 21 CFR 1040.10.
ect to the following two conditions:
/ not cause harmful interference, and
it accept any interference received, including interference that
lesired operation.

ipment has been tested and found to comply with the limits for a
evice, pursuant to part 15 of the FCC Rules. These limits are
vide reasonable protection against harmful interference in a
llation. This equipment generates, uses, and can radiate radio
y and, if not installed and used in accordance with the instruction
use harmful interference to radio communications. However, there
that interference will not occur in a particular installation. If this
; cause harmful interference to radio or television reception, which
red by turning the equipment off and on, the user is encouraged
: the interference by one or more of the following measures :
receiving antenna.
separation between the equipment and receiver.
equipment into an outlet on a circuit different from that to
eiver is connected.
dealer or an experienced radio/TV technician for help.

F:
ot authorized by the manufacturer may void users authority to
vice.

de ce modèle.

Connaissiez ces
symboles de **sécurité**



⚡ Cet « éclair à pointe de flèche » indique qu'un matériel au non isolé, situé à l'intérieur de l'unité, risque de provoquer un choc électrique. Pour la sécurité de chacun, nous vous prions de ne pas retirer le boîtier de ce produit.

! Le « point d'exclamation » attire votre attention sur des sujets risquant de provoquer des problèmes de fonctionnement et d'entretien si vous ne lisez pas les informations s'y reportant.

Cet espace vous est réservé
Inscrivez ci-dessous le numéro de série situé à l'arrière du bloc. Conservez cette information pour vous y reporter à l'avenir.

N° de modèle _____

N° de série _____

DANGER: NE PAS EXPOSER CET ÉQUIPEMENT A LA PLUIE NI A UNE HUMIDITÉ EXCESSIVE POUR ÉVITER LES RISQUES D'INCENDIE ET DE CHOC ÉLECTRIQUE.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

MAC5097

Envie hoy su Tarjeta de Registro de la Garantía para recibir todas las ventajas correspondientes.

• Una vez que se registre la compra de su aparato Philips, Ud. tiene derecho a todas las ventajas correspondientes al dueño de un producto Philips.

• Sirvase llenar y devolver en seguida la Tarjeta de Registro de la Garantía empacada con su aparato y saque provecho de estas ventajas importantes.

Verificación de la garantía

Registre su producto dentro de 10 días para confirmar su derecho a máxima protección bajo los términos y condiciones de la garantía de Philips.

Confirmación del dueño

Su Tarjeta de Registro de la Garantía comprueba que Ud. es el dueño del aparato en caso de robo o pérdida del producto.

Registro del modelo

La devolución inmediata de su Tarjeta de Registro de la Garantía le garantiza que recibirá toda la información y todas las promociones especiales que le corresponden por ser el dueño de su modelo.

Conozca estos

simbolos de **seguridad**



⚡ El símbolo del «rayo» indica que algún material no aislado dentro de su unidad podría resultar en una sacudida eléctrica. Para la seguridad de todos, favor de no remover la cubierta del producto.

! El «signo de exclamación» le llama la atención a características sobre las que Ud. debe leer la información adjunta detenidamente para evitar problemas de funcionamiento y mantenimiento.

Para uso del cliente:

Escriba abajo el número de serie que se encuentra en el panel posterior. Guarde esta información para el futuro.

No. de modelo _____

No. de serie _____

ADVERTENCIA: PARA EVITAR EL RIESGO DE SACUDIDA ELECTRICA O INCENDIO, NO EXPONGA ESTE EQUIPO A LLUVIA NI A HUMEDAD.

PRECAUCION: Para evitar sacudida eléctrica, introduzca la patilla ancha del enchufe al fondo de la ranura ancha.

MAC5097